



# Installation Instructions / Warranty


**hansgrohe**

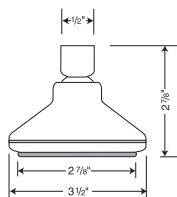


1-Jet Showerhead  
06686XX0

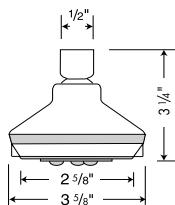


2-Jet Showerhead  
06684XX0

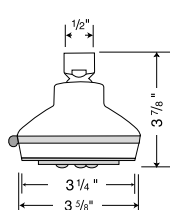


3-Jet Showerhead  
06886XX0

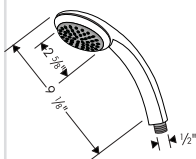


1-Jet Handshower  
06687XX0

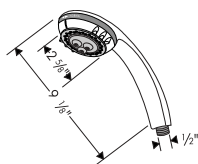

2-Jet Handshower  
06685XX0

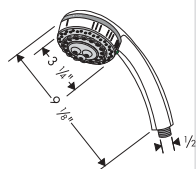

3-Jet Handshower  
06683XX0

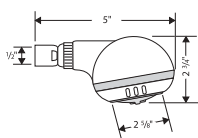

2-Jet Wall-mounted Showerhead  
06892XX0

## Interaktiv Showerheads and Handshowers 1-Jet, 2-Jet, 3-Jet

**interaktiv**

**hansgrohe**

## Product Specification


Maximum Flow Rate 2.5 gpm

Spray modes:

1-Jet showerhead & handshower	full spray
2-Jet showerhead & handshower	full , Turbo <sup>3</sup> massage
3-Jet showerhead & handshower	full, soft, Turbo <sup>3</sup> massage
2-Jet wall mounted	full, Turbo <sup>3</sup> massage

Remove the old showerhead


- While holding the shower arm, remove the existing showerhead by turning counter-clockwise with an adjustable wrench.
- Thoroughly clean the threads on the shower arm with a wire brush.

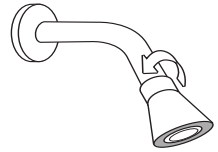

## Interaktiv 1-Jet, 2-Jet, 3-Jet Showerheads

### Showerhead Installation Instructions


- Slide decorative rubber boot onto the shower arm, narrow end first. Push it up and out of the way.
- Make sure that the self-sealing filter gasket is fully seated in the showerhead by grasping the black tab and turning clockwise as far as it will go without forcing it.
- Screw the showerhead onto the arm, taking care not to cross thread.
- Finish tightening with wrench, taking care not to over-tighten or showerhead and / shower arm may be damaged. Turn on the water and check for leaks. Pull boot down over showerhead ball joint.

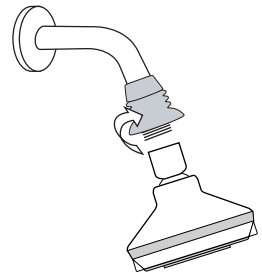

## Interaktiv 1-Jet, 2-Jet, 3-Jet Handshowers

### Install the Hose and Showeraktiv / Interaktiv Handshower


- Wrap the threads on the shower arm with 2-3 layers of good quality plumbers' thread tape.
- Place a black rubber washer in the short hose connector end. Screw it firmly to the shower arm.
- Place the screen washer in the long hose connector end. Screw it firmly to the handshower, taking care not to cross-thread. Tighten hand-tight only – use of a wrench may damage the decorative finish.
- Feed the hose through the cradle on the shower arm mount, wall-mounted handshower holder, or wallbar slider. Lower the handshower until the hose connector end is seated firmly.
- Note: if protection against back siphonage is desired, or is required by local code, and is not provided by other means, a backflow preventer such as Hansgrohe model 06510 should be installed between the shower arm and the hose.

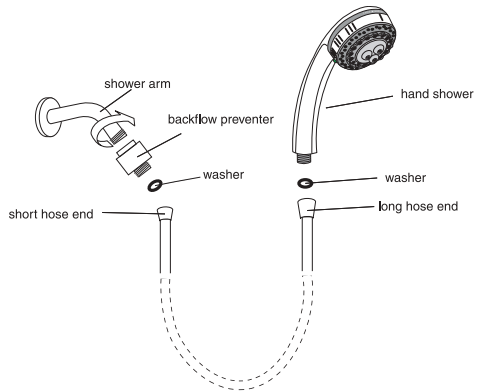

### Interaktiv 2-Jet Wall-Mount Showerhead


#### Prior to Installation

- During rough-in, install a properly anchored drop-eared ell at the desired showerhead location. Install a test nipple. Finish the wall.
- Remove the test nipple. Select a nipple long enough so that, when screwed into the drop-eared ell, it will extend outside the wall 5/8".
- Wrap one end of the nipple with plumbers' thread tape. Screw it into the drop-eared ell. Seal around the nipple with waterproof bathroom sealant.

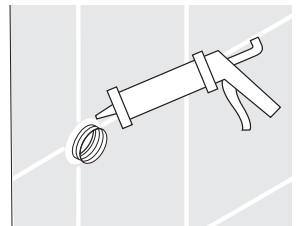

## Install the Wall-Mount Showerhead

- Make sure that the black self-sealing filter gasket is screwed completely into the inlet of the showerhead.
- Install the boot to the showerhead. Screw the showerhead onto the nipple.
- Turn on the water and check for leaks.

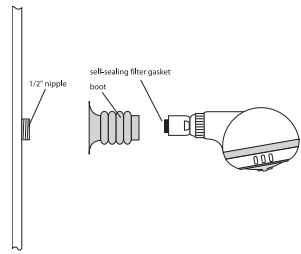


## User Instructions

### Using the Interaktiv 2- and 3-Jet showerheads and handshowers

#### Changing the spray mode

**Interaktiv 2 only** (both showerhead and handshower models)

Turn the function ring clockwise for normal spray, and counter clockwise for massage spray. The indexing line will be next to the name of the function.

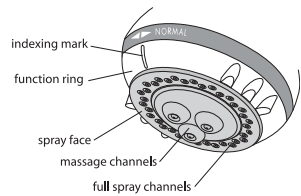


**Interaktiv 3 only** (both showerhead and handshower models)

Turn the function ring clockwise for soft spray, and counter-clockwise for massage. Normal spray is the center position. The indexing line will be next to the name of the function.

**Using the Eco-control** (Interaktiv 3 showerhead and handshower only)

By pushing the Eco-control lever, the user may reduce the flow of water from the showerhead. There are four different speed settings. (On the showerhead version, these four settings repeat around the circumference.) The spray face will move when the Eco-control lever is moved, but the spray mode will not change.

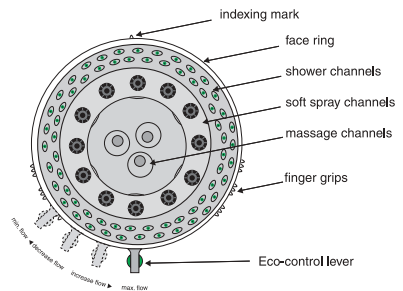

*Note to US users: due to the 2.5 gpm flow restrictor which must be installed, the effect of the speed control will not be as noticeable as designed.*

## **Cleaning Recommendation for Hansgrohe Products**

Modern faucetry and shower products utilize a combination of materials to comply with the needs of the market with regard to design and functionality.

To avoid damage, it is necessary to use some caution when cleaning. Damage caused by improper treatment is not covered under the Hansgrohe warranty.

### **Cleaning Materials for Faucets and Showers**

- To remove lime scale, use only products made specifically for that purpose. Always follow the manufacturer's instructions when using.
- Do not use cleaners that contain hydrochloric, formic, acetic, or phosphoric acids, as these will cause considerable damage to finishes and to plastic components.
- Never mix cleaning materials.
- Never use cleaners containing abrasives. Do not use abrasive cleaning cloths, pads, or sponges.

### **Cleaning Procedures**

- Clean your faucets and shower products as and when required. Regular cleaning will prevent scale buildup and water spotting.
- Follow the label instructions. Do not allow any cleaner to remain on the product for longer than necessary.
- When using spray cleaners, spray first onto a sponge or cloth – do not spray directly onto the product.
- After cleaning, rinse thoroughly with clear water to remove any cleaner residue.

### **Important**

- Soap and shampoo residue can also cause damage to the product. Rinse well with clean water after use.
- If the surface is already damaged, harsh cleaning materials will cause further damage.

## Limited Lifetime Consumer Warranty

This product has been manufactured and tested to the highest quality standards by Hansgrohe, Inc. ("Hansgrohe"). This warranty is limited to Hansgrohe products which are purchased by a consumer in the United States after March 1, 1996, and installed in either the United States or Canada.

### WHO IS COVERED BY THE WARRANTY

This warranty extends to the original consumer purchaser only.

### WHAT IS COVERED BY THE WARRANTY

This warranty covers only your Hansgrohe manufactured product. Hansgrohe warrants this product against defects in material or workmanship as follows: Hansgrohe will repair at no charge for parts only or, at its option, replace any product or part of the product which proves defective because of improper workmanship and/or material, under normal installation, use, service and maintenance. If Hansgrohe is unable to provide a replacement and repair is not practical or cannot be timely made, Hansgrohe may elect to refund the purchase price in exchange for the return of the product.

### LENGTH OF WARRANTY

Replacement or repaired parts of products will be covered for the term of this warranty as stated in the following two sentences. If you are a consumer who purchased the product for use primarily for personal, family, or household purposes, this warranty extends for as long as you own the product and the home in which the product is installed. If you purchased the product for use primarily for any other purpose, including, without limitation, a commercial purpose, this warranty extends only (i) for 1 year, with respect to Interaktiv and Retroaktiv products, and (ii) for 5 years, with respect to AXOR, ShowerPower and Pharo products.

### THIS WARRANTY DOES NOT COVER, AND HANSGROHE WILL NOT PAY FOR:

- A. Conditions, malfunctions or damage not resulting from defects in material or workmanship.
- B. Conditions, malfunctions or damage resulting from (1) improper installation, improper maintenance, misuse, abuse, negligence, accident or alteration, or (2) the use of abrasive or caustic cleaning agents or "no rinse" cleaning products, or the use of the product in any manner contrary to the product instructions.
- C. Labor or other expenses for the disconnection or return of the product for warranty service, or for installation or reinstallation of the product.
- D. Accessories or related products not manufactured by Hansgrohe.

### TO OBTAIN WARRANTY SERVICE

Contact your Hansgrohe retailer, or write to Technical Service at:

Hansgrohe Inc.  
1492 Bluegrass Lakes Parkway  
Alpharetta GA 30004

Or, call Hansgrohe toll-free at (800) 334-0455.

In requesting warranty service, you will need to provide

1. The sales receipt or other evidence of the date and place of purchase.
2. A description of the problem.
3. Delivery of the product or the defective part, postage prepaid and carefully packed and insured, to Hansgrohe Inc. 1492 Bluegrass Lakes Parkway, Alpharetta, Georgia 30004, Attention: Technical Service, if required by Hansgrohe.

When warranty service is completed, any repaired or replacement product or part will be returned to you postage prepaid.

## **EXCLUSIONS AND LIMITATIONS**

**REPAIR OR REPLACEMENT (OR, IN LIMITED CIRCUMSTANCES, REFUND OF THE PURCHASE PRICE) AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. HANSGROHE NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO CREATE FOR IT ANY OBLIGATION OR LIABILITY IN CONNECTION WITH THIS PRODUCT.**

**HANSGROHE SHALL NOT BE LIABLE TO PURCHASER OR ANY PERSON FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES, ARISING OUT OF BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY).**

Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from State to State.

You may be required by law to give us a reasonable opportunity to correct or cure any failure to comply before you can bring any action in court against us under the Magnuson-Moss Warranty Act.

## **PRODUCT INSTRUCTIONS AND QUESTIONS**

Upon purchase or prior to installation, please carefully inspect your Hansgrohe product for any damage or visible defect. Prior to installing, always carefully study the enclosed instructions on the proper installation and the care and maintenance of the product. If you have questions at any time about the use, installation, or performance of your Hansgrohe product, or this warranty, please call or write to us at the toll-free number and address printed above.

